



EG-KEEPER 設定方法について

Ver. 0.1.0

株式会社ダブリューディーエス

AlgorithmのPanel Settingには下記のような設定項目があります。

Panel UI Settings

- Show IP
- Show MAC
- Show Track Rect
- Show Number Of Reg...
- Show Recognize Area
- Show Recognize Result
- Show Temperature

Language: Japanese
Voice Gender: Female
Temperature Unit: Celsius Degree
Min Temperature: 30.0 °C (30.0 ~ 45.0)
Max Temperature: 37.3 °C (30.0 ~ 45.0)
Offset Body Temperature: 0.0 °C (-0.5 ~ 0.5)
Volume: 16
Light Mode: Off
LCD Mode: Auto
UI Style: Big Font Temperature
Reset Flow Statistics: Reset

Unlock Condition (Confirm Enable Attribute)

- Enable Temperature
- Enable Mask
- Enable Guest

Panel UI Background Settings

Panel UI Background
UI Background Settings: [] Browse (jpg/png, <300kb, <1020*600)

Panel Sound And Picture Settings (Confirm Enable Attribute)

- Enable Single Warning
- Enable Liveness
- Enable Stranger War...

Mask Scene

- Enable
- Current Picture: []
- Picture Setting: []
- Current Sound: [0:00 / 0:01]
- Sound Setting: []

Temperature Scene

- Enable
- Current Picture: [] delete
- Picture Setting: [] Browse (jpg/png, <300kb, <1020*600)
- Current Sound: [0:00 / 0:01] delete
- Sound Setting: [] Browse (wav, <300kb)

Pass Scene

- Enable
- Current Picture: [] delete
- Picture Setting: [] Browse (jpg/png, <300kb, <1020*600)
- Current Sound: [0:00 / 0:01] delete
- Sound Setting: [] Browse (wav, <300kb)

Liveness Scene

- Enable

Stranger Warning Scene

- Enable

Light/LCDの変更

Language	<input type="text" value="Japanese"/>
Voice Gender	<input type="text" value="Female"/>
Temperature Unit	<input type="text" value="Celsius Degree"/>
Min Temperature	<input type="text" value="30.0"/> °C (30.0 ~ 45.0)
Max Temperature	<input type="text" value="37.3"/> °C (30.0 ~ 45.0)
Offset Body Temperature	<input type="text" value="0.0"/> °C (-0.5 ~ 0.5)
Volume	<input type="range" value="16"/>
Light Mode	<input type="text" value="Off"/>
LCD Mode	<input type="text" value="Auto"/>
UI Style	<input type="text" value="Big Font Temperature"/>
Reset Flow Statistics	<input type="button" value="Reset"/>



Language :

Voice Gender : Female / Male 起動時の音声のみ

Temperature Unit : °C / °F

Min Temperature :

Max Temperature :

Max Temperatureを変更することにより
よりシビアなチェックにすることも可能
また、36.5ぐらいの設定にしてチェックを
するとワーニング時の表示・音声などと確認
することができます

Volume :

Light Mode : Off / On / Auto(スリープ)

LCD Mode : On / Auto(スリープ)


UI Style : 熱などの表示フォント

Simple Style

Full-screen Infrared

Big Font Temperature

お問い合わせ先

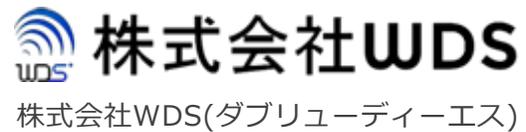

〒116-0013
東京都荒川区西日暮里2-22-1 ステーションプラザタワー504号

メールアドレス : info@wd-s.com